

# IR SELFIE TRIGGER

INFRARED REMOTE  
SHUTTER CONTROL

IR-SC, IR-SN, IR-SO,  
IR-SP, IR-SS

USER MANUAL

 VELLO™

# THANK YOU FOR CHOOSING VELLO

The Vello Selfie Trigger infrared remote control is a wireless remote that lets you take photos with your camera from up to 16 feet away. It's ideal for when you want to take a picture from in front of the camera, as in group photos or just for your selfie shots. The remote is also a key aid when you would like to minimize camera shake while shooting macro or long-exposure photographs. Simply set up the camera where you need it, point the remote at the IR sensor on the camera, and trigger the shot. The Vello Selfie Trigger is sleek, lightweight, and easy to stash in your pocket.

## USING YOUR SELFIE TRIGGER

The Vello Selfie Trigger works with an infrared signal that requires line of sight between the remote and the camera from up to 16 feet away. Make sure there are no physical obstructions between the camera and remote.

1. Set your camera for remote triggering. Consult your camera's manual for more information about the remote triggering feature.
2. Set up your shot and make sure everything is in focus.
3. Aim the remote at the infrared sensor on the front or back of your camera, and press the shutter release button.

## REPLACING THE BATTERY

The Vello Selfie Trigger is powered by a 3 V CR2025 battery. To replace the battery, follow these steps:

1. Turn the remote upside down.



2. Push the locking tab in the direction indicated by the arrow, and pull the battery tray out of the remote.



3. Remove the old battery and replace it with a new one. Make sure the side marked with a plus sign (+) is facing up.



4. Push the battery tray back into the remote until it locks in place.



## PRECAUTIONS

- Please read and follow these instructions, and keep this manual in a safe place.
- Make sure the item is intact and that there are no missing parts.
- Handle the unit with care.
- There are no user-serviceable parts inside the devices. Do not attempt to disassemble or perform any unauthorized modification.
- Do not operate in the presence of flammable gas or vapors.
- Do not handle with wet hands or immerse in or expose to water or rain. Failure to observe this precaution could result in fire or electric shock.
- Keep out of reach of children. This device contains small parts which may pose a shock hazard.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the battery when leaving the product unattended for prolonged periods or when no charge remains.
- Do not use or leave the device in conditions of extreme heat, severe cold, or high humidity.
- Clean the unit with only a soft, dry cloth.
- All photos are for illustrative purposes only.

## TROUBLESHOOTING

The camera will not trigger.

- Make sure the plastic separator is removed from the battery.
- Make sure the battery is installed according to the correct polarity.
- Set your camera for remote triggering.
- Make sure there is nothing blocking the line of sight between the Selfie Trigger and your camera's IR sensor.

## FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

## SPECIFICATIONS

<b>Dimensions (H × W × D)</b>	0.26" × 1.18" × 2.4" (6.6 × 30 × 61 mm)
<b>Weight</b>	0.3 oz. (8.5 g)
<b>Operating distance</b>	16' (4.9 m)
<b>Operating temperature</b>	41°F–104°F (5°C–40°C)
<b>Battery type</b>	3 V CR2025
<b>Typical battery life</b>	Up to 3 years or 20,000 exposures

## ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit [www.vellogear.com](http://www.vellogear.com) or call Customer Service at 212-594-2353.



Product warranty provided by the Gradus Group.  
[www.gradusgroup.com](http://www.gradusgroup.com)

VELLO is a registered trademark of the Gradus Group.

© 2015 Gradus Group LLC. All Rights Reserved.